

Personal Torch Alarm PA-6

Feel Secure with a Personal Alarm by your side

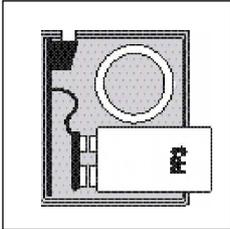


fig.1



fig.2

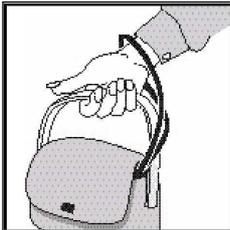


fig.3

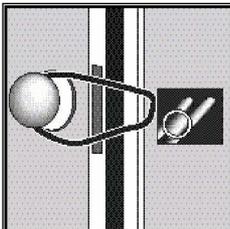


fig.4

Compact, Powerful, Efficient, The Personal (Torch) Alarm is Invaluable In all Distress Situations.

Pull the Ripcord for an Ear Piercing Alarm, audible up to 1/2 mile away.

Police and Security Advisors recommend the use of Personal Alarms to minimise the threat of Assault, Rape, Animal Attack and Obscene Phone Calls.

Warning

The effectiveness of the **Personal (Torch) Alarm** is due to its extremely loud and powerful siren, which produces 143 decibels of sound at source (125 decibels is the normal pain threshold of human hearing). As a result, prolonged exposure can cause permanent hearing damage.

Do Not Activate the Alarm Unnecessarily. In particular, take care to avoid endangering small children and pets.

The manufacturer and its agents will not accept any responsibility for any loss, damage or personal injury sustained while in possession of this product whatever the cause or reason.

Power Supply

The **Personal (Torch) Alarm** is powered by a 9V heavy duty battery (PP3 or equivalent). To ensure that your alarm is always at the peak of efficiency:

- Check the batteries condition regularly by activating the alarm for a short period.
- At the first sign of a weak sound, replace the battery with a new one.

Instructions for Personal Torch Alarm

To operate your **Personal Torch Alarm**: Simply pull the cord to remove the pin. The alarm will sound and flash, the alarm will only stop when the pin is replaced. To use the alarm as a torch, simply press the button on the side of the alarm. The **Personal Torch Alarm** will run for up to two hours on a fresh battery.

To Change the Battery in your Personal (Torch) Alarm

1. Remove the two Phillips screws from the back back of the alarm (fig.2)
2. Remove the back cover by pressing the two clips at the bottom of the alarm and replace the battery, ensuring that the new battery is inserted as shown in (fig.1)
Note: Incorrect insertion of the battery will prevent your **Personal (Torch) Alarm** from working properly and will damage the alarm.
3. Replace the back cover and re-tighten the two phillips screws.
4. Always test the alarm after changing the battery.

Suggestions For Use

The **Personal (Torch) Alarm** can be held simply in your hand with the cord slipped around the wrist. Alternatively, it is fitted with a clip which can be used to attach it to a belt or waistband for personal security protection, or to a handbag or other item of luggage for protection against theft (fig.3). The alarm must be accessible when carrying.

The mounting bracket, supplied with strong adhesive fixings, enables the **Personal (Torch) Alarm** to be used as a door security device. The bracket can also be screwed to a door or similar, for a more permanent fixing (fixing screws not supplied).

If the mounting bracket is not required, remove it before using your **Personal (Torch) Alarm** (fig.4).

Note: Please store in a cool dry place.